

## MICMUTE PP

The Micmute PP and PPD are configured as latching Push On; Push Off switches, meaning that the switch must be pushed and released to turn the signal on or off through the box. Each time the switch is pressed and released (PP), or toggled (PPD) the signal is changed from one condition to the other. The PP and PPD have an indicator LED feature that is operational when the connected microphone preamp input is providing phantom power. The blue LED illuminates to indicate that the mic is live and signal is passing through the Micmute box. The LED is not functional when phantom power is not present. The Micmute PPD uses an indicating rocker switch, which displays a red bar when the signal is turned on.

**Micmute PP - Push on Push off**  
**Micmute PPD - PUSH ON/OFF DESK BOX**



**whirlwind**<sup>®</sup>  
[www.whirlwindusa.com](http://www.whirlwindusa.com)



Made In USA

## Also available:

The Micmute **PM** and **PMD** are configured as Push to Mute switches, meaning that the input signal is normally on, passing through the box. When the switch is depressed and held down, the signal is turned off or muted. The signal is reconnected as soon as the switch is released.

The Micmute **PT** and **PTD** are configured as Push to Talk switches, meaning that the input signal is normally not connected to the output; nothing is passing through the box. When the switch is depressed and held down, the signal is turned on and passed through to the output. The signal is disconnected as soon as the switch is released.

The Micmute **PX** is an active, completely silent, microphone muting box. The circuitry allows the user to temporarily mute the mic signal with no audible artifacts even when the console channel is set at high gains. In addition, the Micmute PX can be configured to operate in any of the switching modes: PT (Push to Talk), PM (Push to Mute), or PP (Latching Push On; Push Off).

This product is warranted to be free of defects in materials or workmanship to the original purchaser for a period of 3 years from the date of purchase. Should warranty service be required, return the unit postage paid along with the original sales receipt to:

Whirlwind Music Dist., Inc.  
99 Ling Road  
Rochester NY 14612

Whirlwind will, at its option, repair or replace the unit. This warranty does not cover damage resulting from abuse, unauthorized modifications or use of the product in unintended applications.

**whirlwind**<sup>®</sup>  
[www.whirlwindusa.com](http://www.whirlwindusa.com)